 
 


Dancing Robot Speaker

Instruction Manual

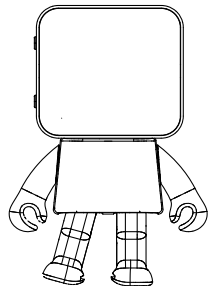

NSP-228A

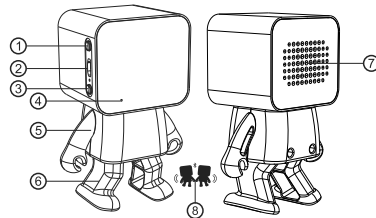

SWING DANCING SPEAKER - TOP, MIDDLE SECTION

- 1) ON/OFF and Incoming Call Receiver
- 2) USB Charge Jack
- 3) Dancing Mini Cube Button
- 4) Microphone Position
- 5) Arm can be in different direction
- 6) Movable Legs
- 7) Stereo
- 8) Support for TWS Interconnection

◆Product manual

Welcome to buy our patented design Ali Speaker our company reserves the final interpretation of the "manual". This product is subject to change without notice. The user should do the important data backup. The Company shall not be liable for any loss resulting from loss of data. This manual has been carefully checked, but does not rule out the possibility of a small number of text errors. If you find text errors please feel free to contact with our customer service center, Read these operating instructions carefully before use and use the original supplied accessories. In the use of start dancing function process do not be use hand or other means to force the device to prevent the foot swing, to avoid unexpected damage.

◆Product Features Description

• The product is a protable robot type speaker that uses both of bluetooth wireless technology and swing dancing technology, the product can dance with the rhythm of music and do the dance movments.

• 3.5W Amplifier and enhanced bass (passive diaphragm) make the sound more robust.

☆The Bluetooth device to be connected to this system needs to support A2DP (Advanced Voice Delivery Configuration Protocol).

◆Specifications

- ※ Charging time, it takes about 2 hours to finish charging.
- ※ Speaker Specifications (ø36MM unit. / 4ohms / 3.W bandwidth; [70HZ-- 20KHZ] sensitivity; 1K (85dB))
- ※ Speaker rated power output 3W.
- ※ Lithium battery specifications; 3.7V / 400mAh capacity; sound playback time about: 4 hours
- ※ Maximum power distortion 7%
- ※ Signal to noise ratio: 90HZ-20K / 65dB
- ※ Follow the Bluetooth
- ※ Compatible with A2DP \ AV/RCP high-quality stereo audio transmission and remote control protocol
- ※ Support hands-free Bluetooth hands-free (HFP protocol)
- ※ Built-in Kalimba DSP (CVC) data processor, complete digital echo, noise, voice processing.
- ※ Bluetooth work in the world-wide 2.4GHz ISM, the use of band (2.4000GHZ - 2.4835GHZ)
- ※ Wireless effective transmission distance up to 10 meters
- ※ Support for TWS interconnection

◆ Operating Instructions

- ※ Bluetooth Connection
 1. Press and hold the [>||] button for 2 seconds, release the button after turning on. The speaker light starts to blink quickly into the blue light pairing state. The pairing step is performed on the Bluetooth device to detect the system. The pairing of this system is named " Ali Speaker "

2. A list of detected devices appears on the display on the Bluetooth stereo source device. The system displays "Ali Speaker " to select this device to perform pairing. During the pairing process, a blinking blue light flashes after the beep sound, indicating that the pairing is successful.

3. The speaker remembers the last connected device and will automatically connect the last successful pairing device each time while the speaker is restarted.

☆: If the connection is not successful, please turn off the speaker and reconnect with the device

※TWS Interconnection for two speakers

- Turn On the two speakers in pressing the on/off button.
- Wait 30 seconds that the light blue appears and the sound of the beep sound
- The speakers will start blinking with a light into TWS pairing state. Then the speaker will match automatically with a beep sound.
- Now, select only 1 Ali Speaker in your Bluetooth devices list to run two speaker working together for TWS function.

※ Play Music

When the speaker is connected to the Bluetooth stereo source device, press the [>||] button shortly or press the play button of the stereo source device. The system will enter into the music playing state. To pause the playing state, press the [Play] button shortly.

※ Answer incoming calls

There is a call indication sound when the incoming call sounds, short press [>||] button to answer the call.

※ Redial the phone number

When the speaker is switched on, press the [>||] key shortly twice and the system will automatically re-dial the last phone number.

※ Cancel the telephone dialing

If the speaker is dialing a call, and needs to cancel the dialing.

Press the [>||] key shortly to cancel the dialing.

- ※ Hang up the phone
 - During the call, if you want to hang up the phone call, press the [>||] button to automatically hang up the current phone call.
- ※ Turn on/off the dancing function or dancing speed transfer
 - Short press dancing button for ON/OFF dancing Function with speed transfer or Long press dancing button for Down.
 - While the speaker is in a normal speed dancing situation, short press dancing button to transfer for fast speed or normal speed or ON/OFF dancing function, Long press dancing button is for Down.
 - There are a slim sound from the motor working situation while the sound volume is in +-10DB.

※Turn off the speaker

1. Press the [>||] button for 2 seconds to enter the turn off state, the blue light goes out after the beep sound and the speaker is automatically turned off.
2. When the power is low, the speaker will automatically enter the turn off state.
3. While the machine is at "on" situation, the product will be into turn-off automatically if we pull out the charging cable or turn off the power during the product is in charging situation.

※ Charge

Use the USB cable to connect to the speaker, when charging there is a red light, and while the red light goes out is fully charged.

Note: Please charge the battery in the off state to ensure the battery fully charged.

◆ Solution of the different situation

The speaker in use if you encounter the following conditions,

※ Automatic turn-off

This may be the speaker's power shortage, please re-charge the speaker, when it is fully charged and try to turn on again.

※ Can not be charged

Please try to change the USB charging cable.

※ System halted or control failure

If the device system halted or out of control, please charge the device and then pull out the charging cable can be resume to work.

※ Can not be paired or connected

In your list of Bluetooth devices to delete the local system device name, then the speaker operation in to the pairing mode, try again on the speaker pairing.

※ Can not connected with TWS automatically

Double quick click the on/off button, it will connected.

 
WARNING!!!

THIS PRODUCT IS NOT A TOY AND IS NOT SUITABLE FOR CHILDREN UNDER THE AGE OF 3.

- Do not expose the speaker to water, fire, diluents or chemicals.
- Do not stop the dancing motion of the speaker by hand with force to avoid damages.
- Do not apply impact onto the speaker.
- Do not use the speaker close to magnetic fields and electricity.
- Do not use the speaker under direct sunlight or close to heating apparatus.
- Do not try to disassemble, repair or modify the speaker yourself.
- Do not use the speaker while driving in a car and/or riding a bike.
- Do not have the packaging, batteries, and used electronic components together when discarding. Please separate the different components before discarding.

Dancing Robot Speaker

Instruction Manual

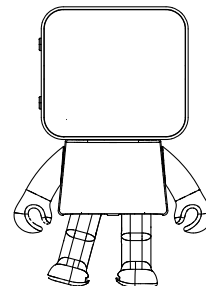

Ref-228ST