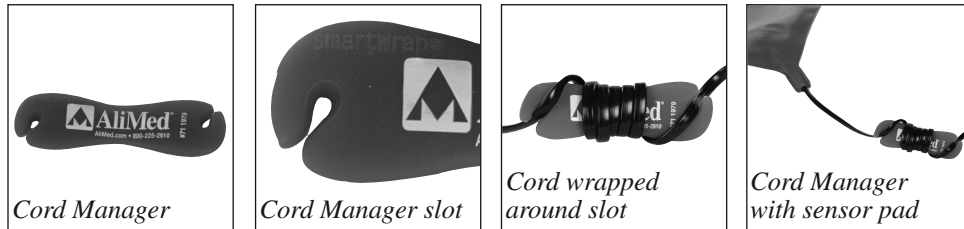# AliMed® Cord Manager

Instructions for Use, Application, and Care

Your new AliMed® Cord Manager can be used to wrap excess cord from alarms and sensor pads to get them out of the way of the patient and resident.

Use

Cord Manager

Cord Manager slot

Cord wrapped around slot

Cord Manager with sensor pad

1. Remove Cord Manager from plastic bag.
2. Set up alarm and sensor pad according to instruction sheets.
3. Insert cable through either slot on Cord Manager—approximately 6" away from alarm unit.
4. Wrap excess cord around Cord Manager until all extra cord is eliminated.
5. Secure by inserting cable through the Cord Manager's remaining slot.

Care

Wipe clean using standard cleaning disinfectants.

Warning

Before using the AliMed Cord Manager, read entire instruction sheet, and save for future reference. Failure to do so may result in injury or death to a person in your care.

Contraindication

May present a choking hazard for pediatric and/or psychiatric patients. Do not use with patients at risk of choking.

Construction

Made of Silicone/rubber.

To Reorder

#711979	Cord Manager 20/pk
#79990	TR2 Alarm
#70070	TR2 Alarm w/6-month bed sensor pad
#70069	TR2 Alarm w/6-month chair sensor pad
#70144	TR2 Alarm w/18-month chair sensor pad
#711813	TR2 Alarm w/Ultra-Thin™ 6-month sensor pad
#711109	Bed and Chair Alarm holder 3/pk
#711110	Bed and Chair Alarm holder 10/pk
#711111	Bed and Chair Alarm holder 20/pk

Manufactured for:

AliMed® inc.
297 High St., Dedham, MA 02026 USA
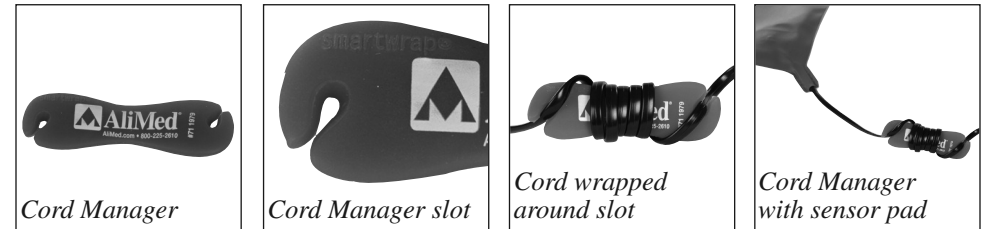PH 800-225-2610 • FAX 800-437-2966

Mount any alarm anywhere

Universal Alarm Mount allows any alarm to mount in any location. Wherever a mounting surface or area is too thick, too curved, or too flat—the Universal Alarm Mount solves the problem. Each durable mount holster comes with a kit of attachments, enabling mounting where other mounts cannot go.

Holds most alarms—3.36"W x 4.2"H x 1.62"D at fullest extension. You can use multiple attachments and move the alarm mount holster between them easily. Get the alarm off the floor or table and mounted where it works best with this mount.

NEW!

Alarm mount

Mounts onto thick headboards and chair backs

Simple to attach

Attach your alarm to chair, bed, or other surface in three simple steps!

1. Attach chair, bed, or flat holder to mounting bracket.

2. Place into holes and slide up (push one side up and then the other).

3. Insert Alarm into holster and set up accordingly.

**Choose from
four attachments
(all included)**

1. Chair, 2. Flat, 3. Small Bed, 4. Large Bed

Universal Alarm Mounts
#71 1109	3/pk
#71 1110	10/pk
#71 1111	20/pk

Manufactured for:

▲ AliMed® inc.
297 High St., Dedham, MA 02026 USA
PH 800-225-2610 • FAX 800-437-2966